

Zeecraft Wireless Showtime Buzzers

Buzzer	1	2	3	4	5	6
1	UP	UP	UP	UP	???	???
2	DOWN	UP	UP	UP	???	???
3	UP	DOWN	UP	UP	???	???
4	DOWN	DOWN	UP	UP	???	???
5	UP	UP	DOWN	UP	???	???
6	DOWN	UP	DOWN	UP	???	???
7	UP	DOWN	DOWN	UP	???	???
8	DOWN	DOWN	DOWN	UP	???	???
9	UP	UP	UP	DOWN	???	???
10	DOWN	UP	UP	DOWN	???	???
11	UP	DOWN	UP	DOWN	???	???
12	DOWN	DOWN	UP	DOWN	???	???
13	UP	UP	DOWN	DOWN	???	???
14	DOWN	UP	DOWN	DOWN	???	???
15	UP	DOWN	DOWN	DOWN	???	???
16	DOWN	DOWN	DOWN	DOWN	???	???

Generic DIP switch positions for individual buzzers
DIP switches 1 through 4 control channel assignments
DIP switches 5 and 6 control frequency
 Frequency 1 is UP, UP. Frequency 2 is DOWN, UP.
 Frequency 3 is UP, DOWN. Frequency 4 is DOWN, DOWN.